



## HG-X1 Quick Start Guide

### To turn on the device -

ensure the battery is charged. Press and hold the **POWER** button until the device powers on. Device will automatically resume its last active state.



### To turn off the device -

Press and hold the **POWER** button for 3 seconds. Note: Backlight of LCD screen will auto turn off to save battery if no activity for 3 minutes.



3 Seconds

Short press the **POWER** button to cycle through the options.

- **Time** – Time and Battery status display
- **Alarm Clock** – Alarm Clock, Time and Battery status display
- **Radio** – FM (Default), Channel and Battery status display
- **Bluetooth/SD Card** – Bluetooth, Time, and Battery status display

### To access the MODE menu -

press the MODE button to switch between functions.



- **Time** – briefly press to adjust hours and minutes
- **Alarm Clock** – press play/pause to set & cancel alarm; press any button to turn off
- **Radio** – short press to circle through FM, AM and weather bands
- **Bluetooth/SD Card** – toggle between Bluetooth or SD card

### To enable weather alert -

ensure you are on the correct weather channel, then press the **W ALERT** button. The “WB” icon on the LCD will flash. Device Flashlight will be ON with voice prompt. When a weather alert is received, will sound an audible siren and the flashlight will flash on. If need pull antenna out



### To use the flashlight in SOS Morse code and Panic alarm & ultrasonic dog whistle,

press the SOS button on the device. Short press will activate the SOS morse code flashlight with Panic alarm. Press again to deactivate. A dog icon will appear on the LCD. Continue to press for 3 seconds to activate SOS morse code flashlight ultrasonic dog whistle



**To charge the internal battery -**

connect the included USB-C cable to the device and a power source to charge the internal battery. Each block of battery icon represents capacity 25%, 50%, 75%, 100%.



**To charge a USB powered device -**

connect the device's charge cable to the USB port of the radio, then connect the device to the charge cable. Once charging is complete, disconnect the device and charging cable from the HG-X1. This will allow you to operate the other features in your HG-X1.



**To access the Tune+ settings menu -**

In respective **MODE** short press **TUNE+** button to access settings.



- **Time & Alarm Clock** – short press to add 1, long press to add continuously
- **Radio** – in radio mode, Tune up the channels, short press for last channel
- **Bluetooth & SD Card** – short press for last song

**To access the Tune- settings menu -**

In respective **MODE** short press **TUNE-** button to access settings.



- **Time & Alarm Clock** – short press to minus 1, long press to minus continuously
- **Radio** – in radio mode, Tune down the channels, short press for next channel
- **Bluetooth & SD Card** – short press for next song

**To access the Play/Pause settings menu -**

In respective **MODE** short press **PLAY/PAUSE** the music and to access settings.



- **Radio Mode** – AM/FM/WB icon, battery icon, radio channels on screen
- **Time Mode** – time, battery icon on screen
- **Bluetooth & SD Card Mode** – SD card icon, battery icon, time on screen

**Volume+ & Volume- settings menu -**

short press **VOL+** or **VOL-** to increase or decrease the volume of the device.



SMAV Companies LLC  
7595 Currell Blvd Unit 25093  
Saint Paul, MN 55125  
(651) 252-4454

We would love to hear from you!



or by visiting us at [www.trekoutfit.com](http://www.trekoutfit.com)

© SMAV Companies LLC